




// Use a rubber hammer to install the plugs (6) into the front bumper (2).

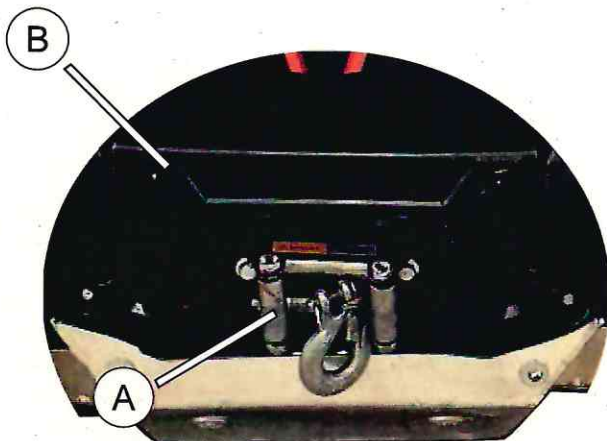

// Remove fairlead roller (A) and plastic bumper (B).

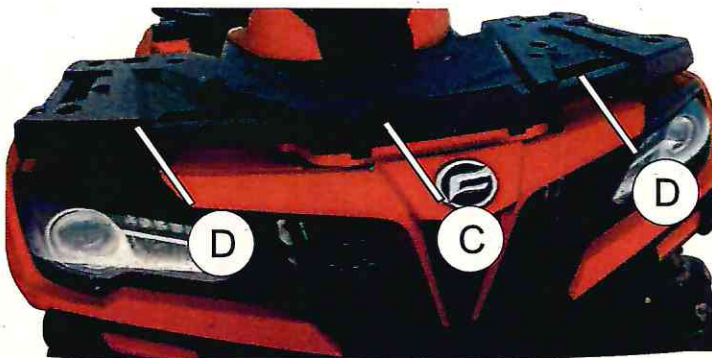


// Remove battery compartment cover (C) and trunk linings (D).

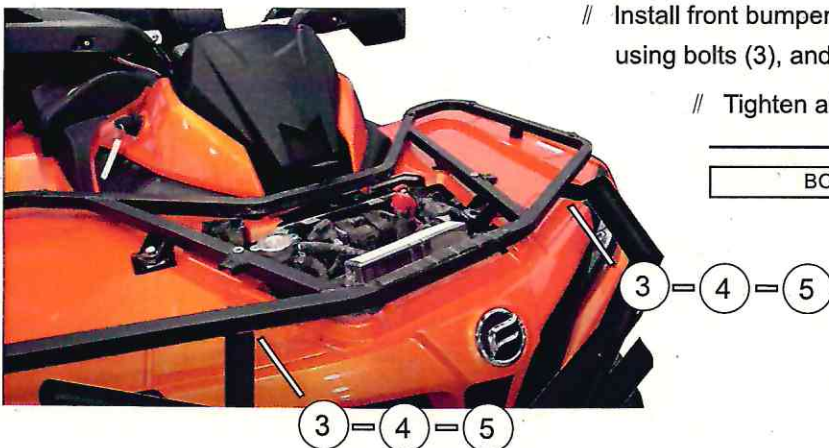

// Install front bumper with upper attachment points as shown in Figure, using bolts (3), and washers (3). (4).

// Tighten all bolts to the specified torque value.

BOLT	M8x16	20-24N.m
------	-------	----------

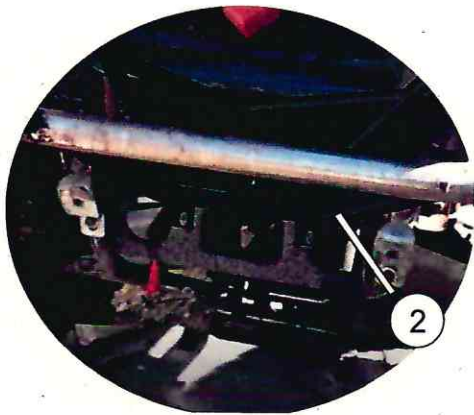


// Install front bumper with lower attachment points as shown in Figure.


// Cut holes in the plastic bumper (B), according to the attached diagram on the page 4.




// Install battery compartment cover (C) and trunk linings (D).

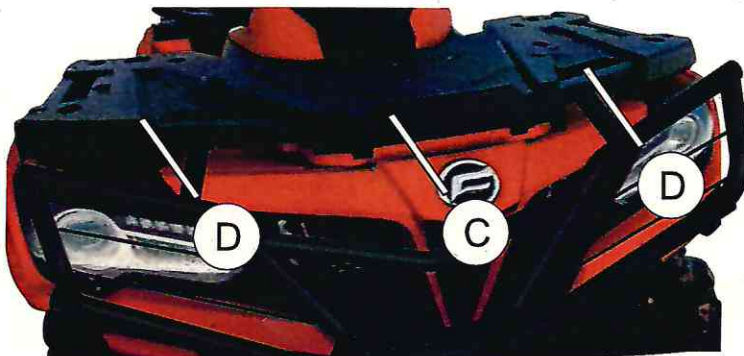

// Install fairlead roller (A) and plastic bumper (B).

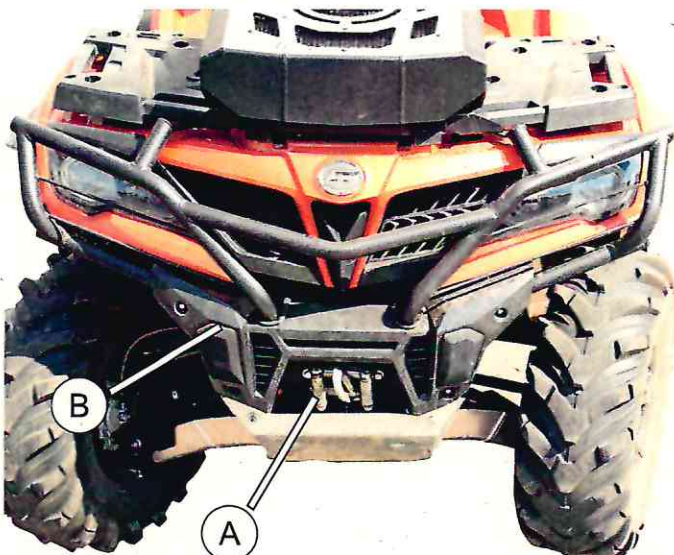

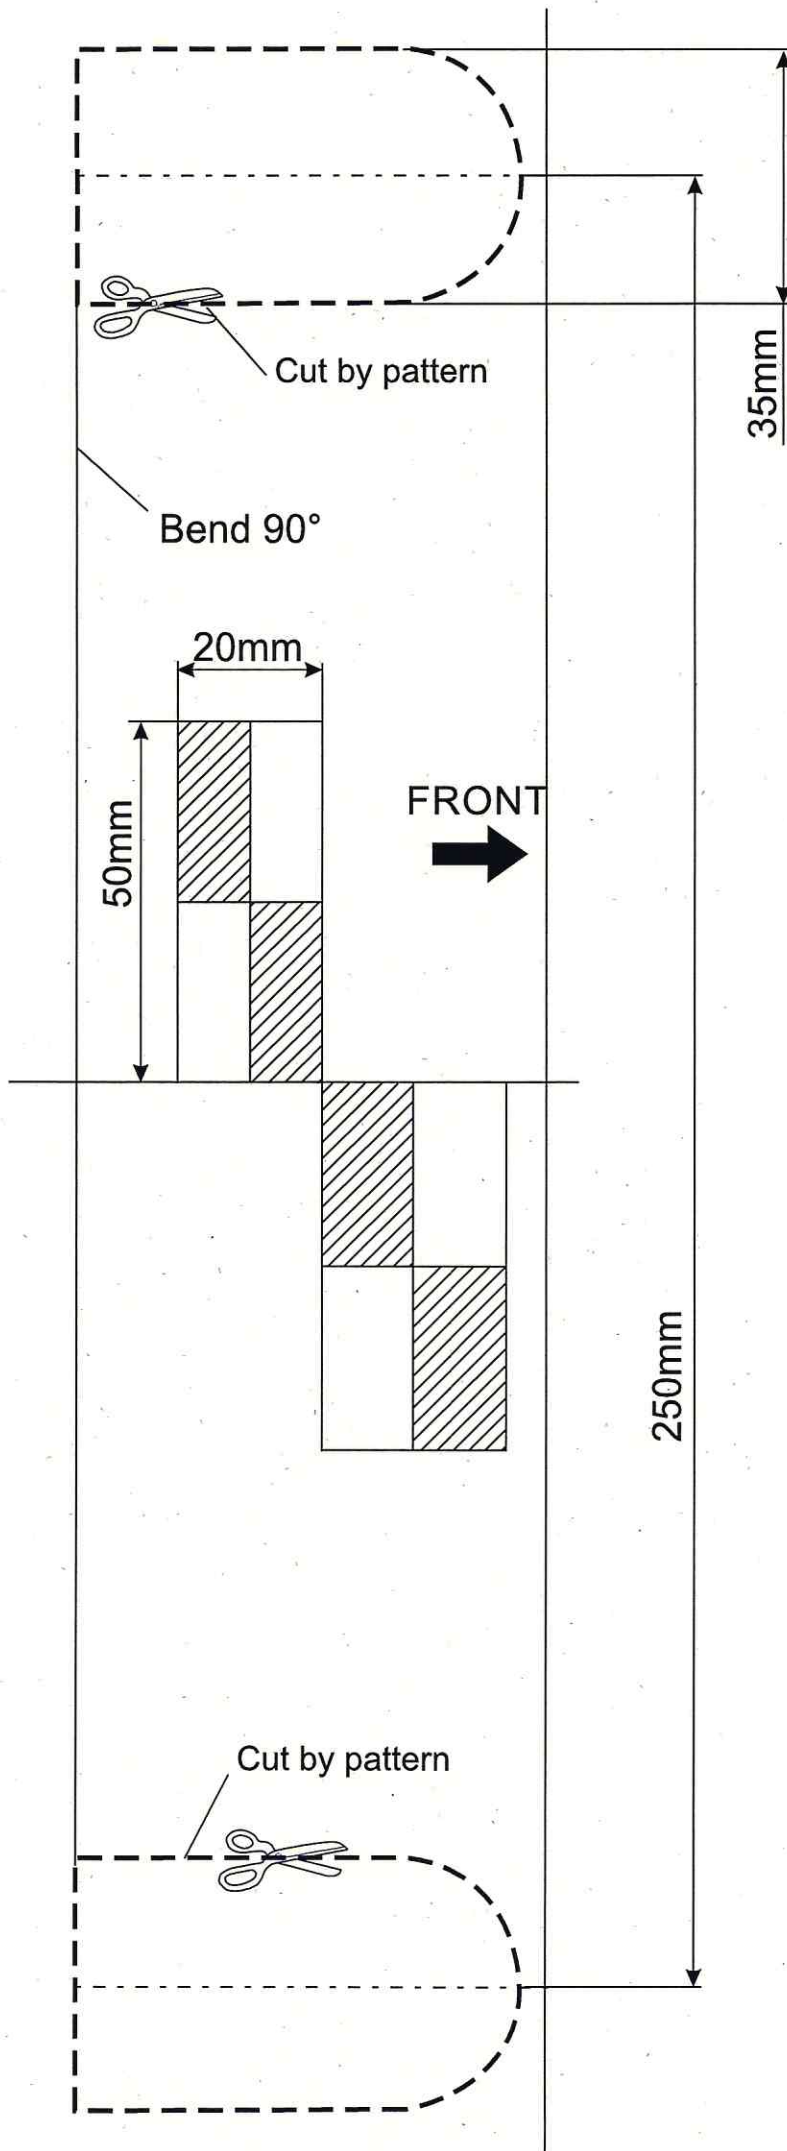

// Template for 9AWV-801300-2000

// Print the template using option 100% scale at printer settings.

// Check the sizes of printed template using ruler in special field. If OK, go to the next step, otherwise try another setting at printer.

// Cut both tube patterns with scissors.

// Remove plastic bumper from your ATV.

// Locate template on your plastic bumper.

// Cut the bumper.

// Install bumper 9AWV-801300-2000 and plastic bumper in appropriate order.