
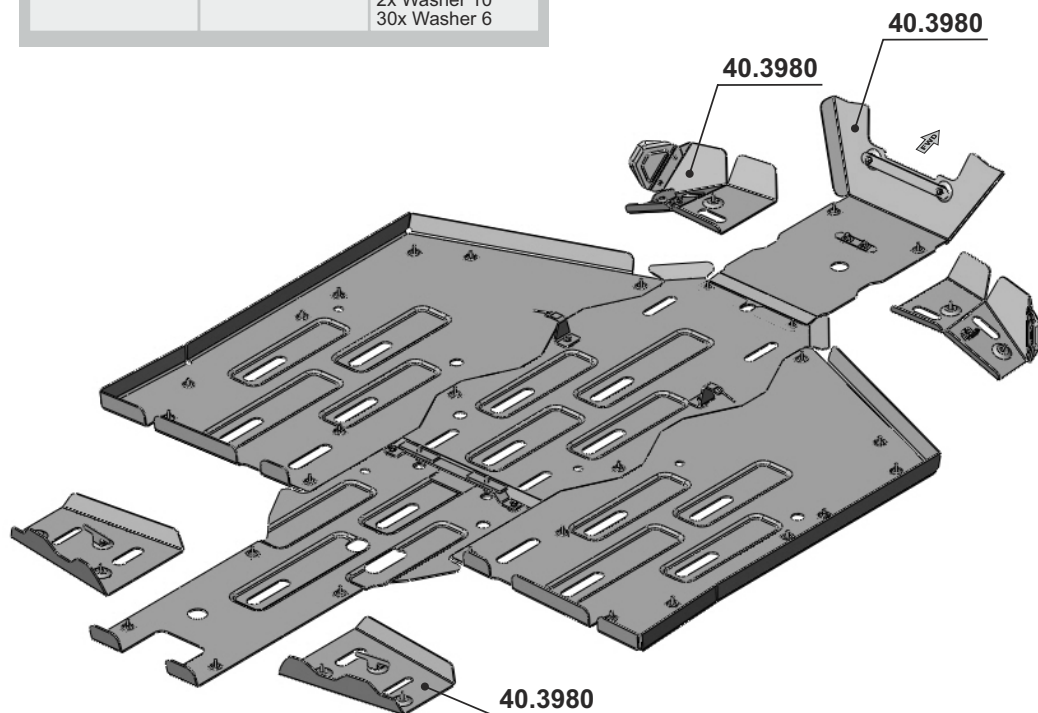


# CFMOTO UFORCE1000 / U10

Material: Aluminium

## Main parts of skid plate set

Part name	Part number	Fitting
Main part	40.3980	1) 2x Bracket 2) 1x Clamp
		3) 2x Bracket 4) 1x Bracket
		5) 1x Clamp 6) 2x Hook
		7) 2x SD 2002 36x SD 28000
		2x Bolt M10x25 30x Screw M6x30
		18x Screw M8x25
		30x Washer 6 18x Washer 8
		2x Washer 10 30x Washer 6

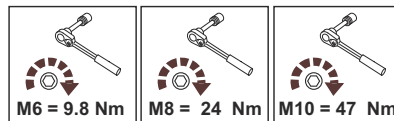

## CFMOTO UFORCE1000 / U10, Mounting Instruction

1. Remove all of the factory plastic guards.
2. Install the holder (pos. 4) using brackets (pos. 7) and fasteners M10x25 on the cross beam of the UTV frame which is located before the rear differential case.
3. Install the Rear part and tighten 4 bolts M6x30 with suitable washers.
4. Place the clamps (pos. 3) on the UTV frame.
5. Install the Middle part by hand tighten 2 bolts M6x30 with suitable washers. Then tighten the Middle part to the clamps (pos. 3) by bolts M8x25 with suitable washers.
6. Connect the Rear and Middle parts by screw in 2 bolts M8x25 with suitable washers.
7. Install the Front part by hand tighten 4 bolts M6x30 with suitable washers. Then tighten the Front part of the skid plate using the flat brackets (pos. 2 and pos. 5) and fasteners.
8. Connect the Front and Middle parts by screw in 2 bolts M6x30 with suitable washers.
9. Install the left and right side parts using fasteners shown on figure.
10. Install the Front arm guards using the clamps (pos. 6) and fasteners shown on figure.
11. Install the Rear arm guards using the clamps (pos. 1) and fasteners shown on figure.
12. Check again all the fasteners are tighten. Congratulations on you skid plate install.



[www.stormprotect.ru](http://www.stormprotect.ru); [www.storm-protect.com](http://www.storm-protect.com)



[www.stormprotect.ru](http://www.stormprotect.ru); [www.storm-protect.com](http://www.storm-protect.com)

